


DIY Corrugated Sheets | Installation Guide

SUNTUF® Beehive | SUNTUF® Iron/Greca | PALRUF® Iron/Greca

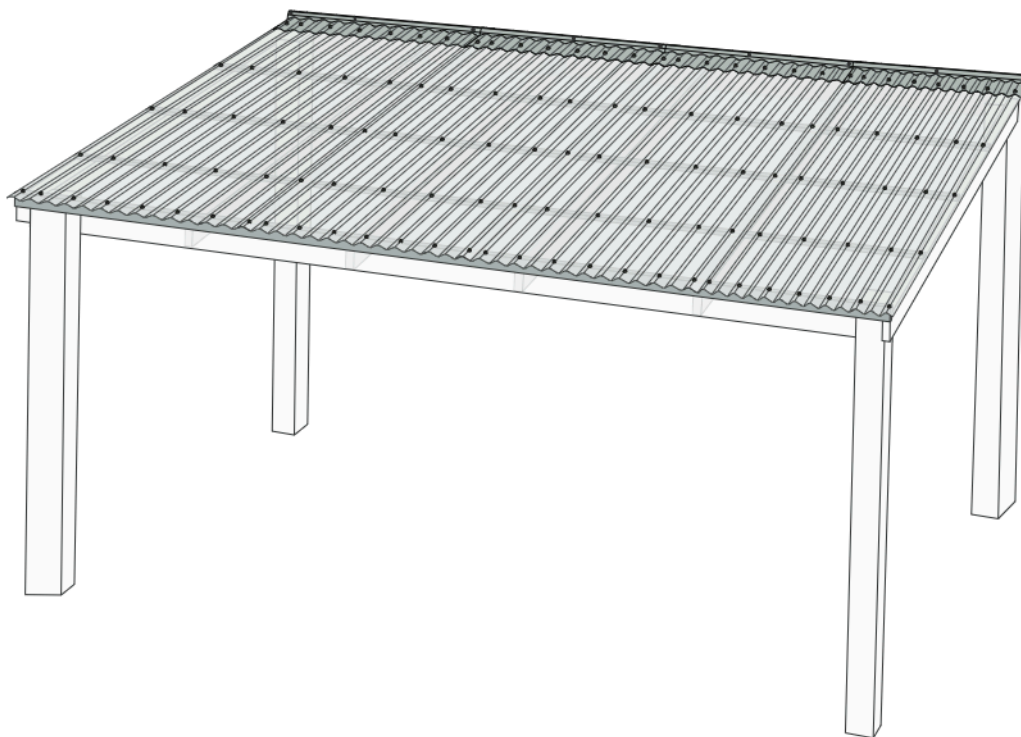

Easy to install



Hail & impact resistant



UV resistance



Minimal maintenance

[SUNTUF® Beehive - Product Page](#) 

[SUNTUF® DIY - Product Page](#) 

[PALRUF® DIY - Product Page](#) 

Before Installation

Safety comes first


When installing roofing sheets or doing maintenance work, always use ladders or crawl boards, supported by minimum three roof structural elements.




Required tools



Accessories

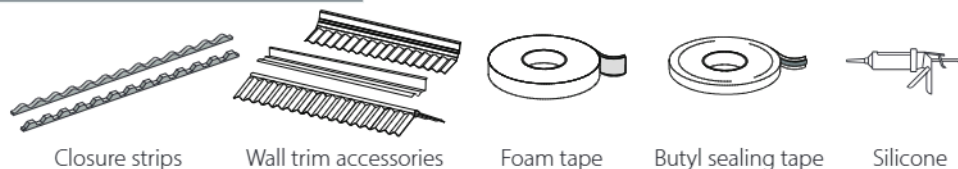


Screws for SUNTUF Beehive

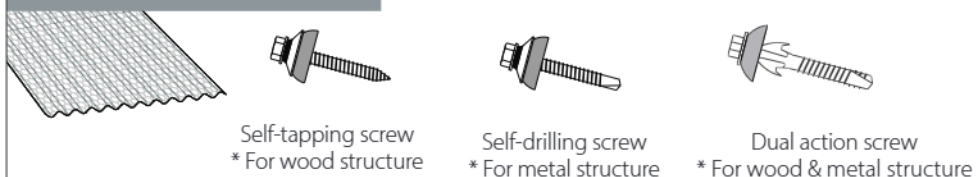

Screws for SUNTUF/PALRUF




Purlin spacing

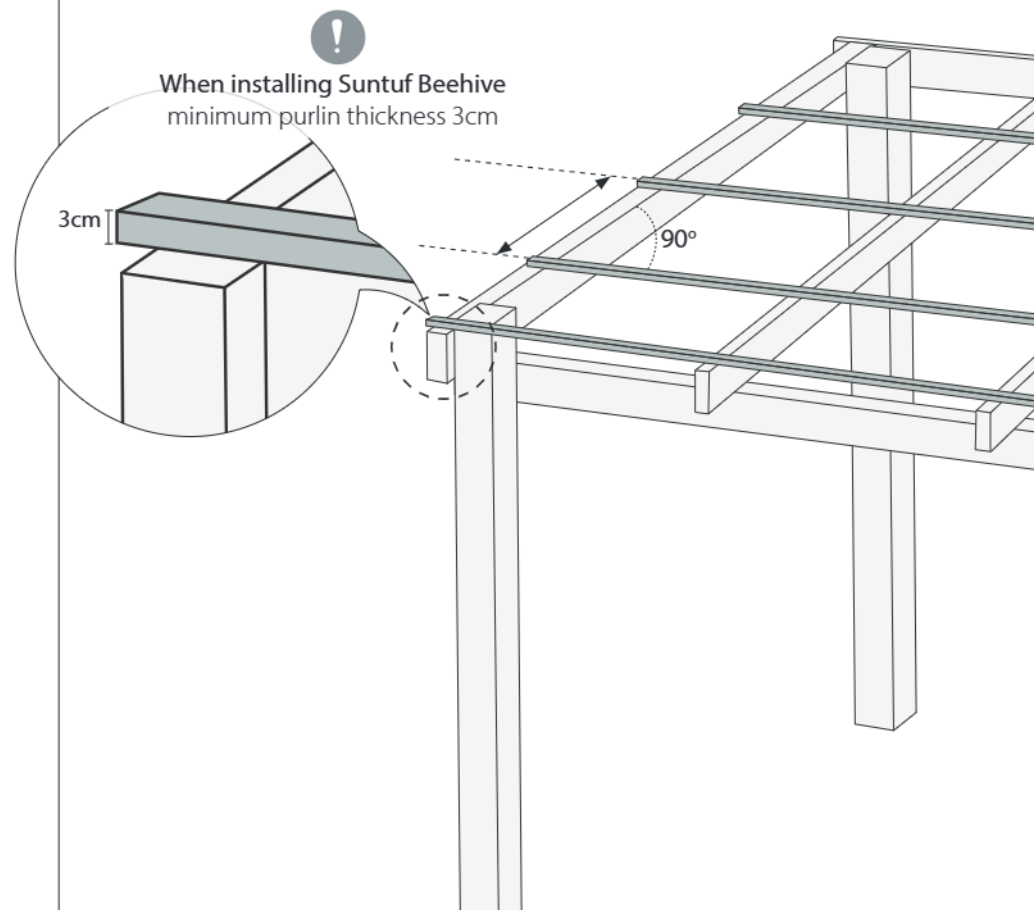

Profile	Distance between purlins	Minimum purlins thickness
Suntuf Beehive	800-1250mm	3cm
Iron/Greca	600-800mm	2cm

Before Installation

Minimum arching radius

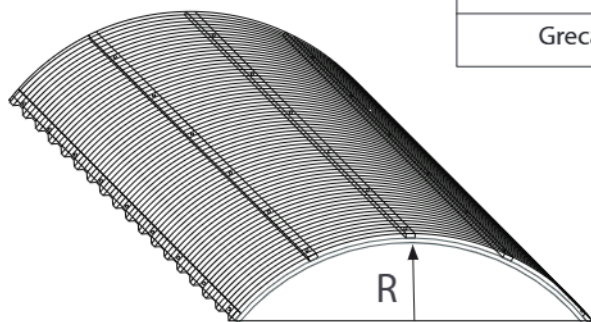


Suntuf Beehive	7m
Iron	4m
Greca	4m

Ensure minimum roof pitch




This minimum pitch will ensure proper water runoff and keep the roof panels clean.

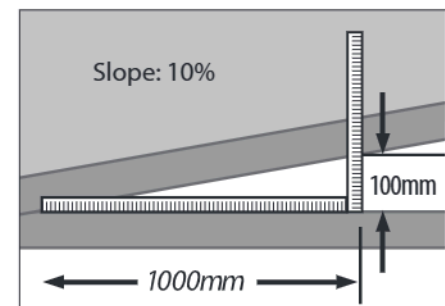


Sheet length




Before installing sheets longer than 7 meters, please contact your PALRAM representative.

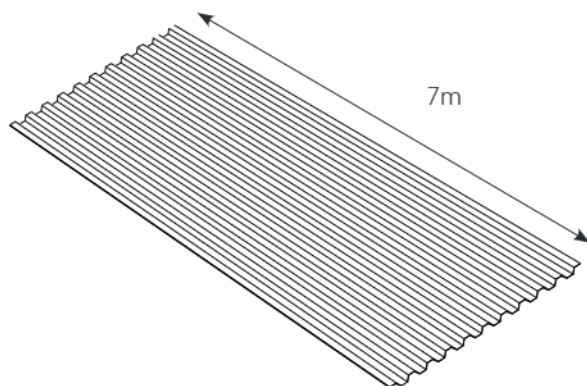


Recommended order of installation

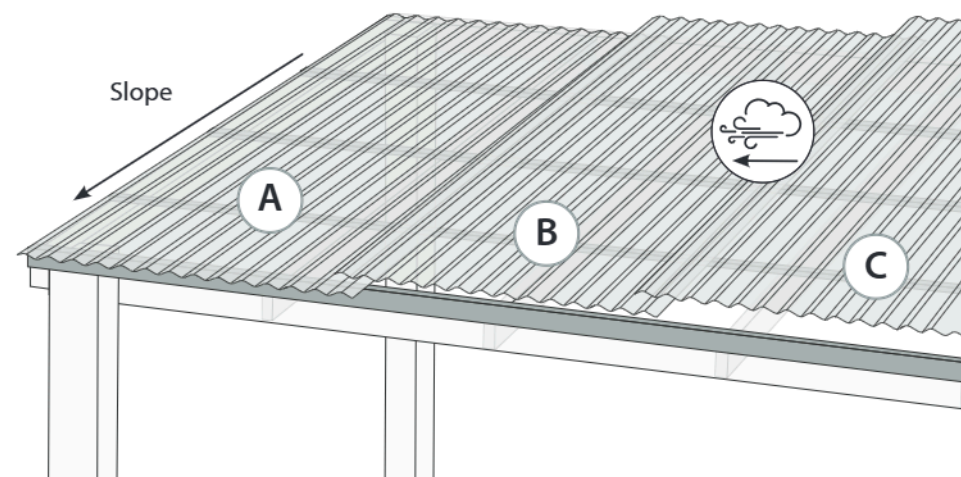


! Screw scheme

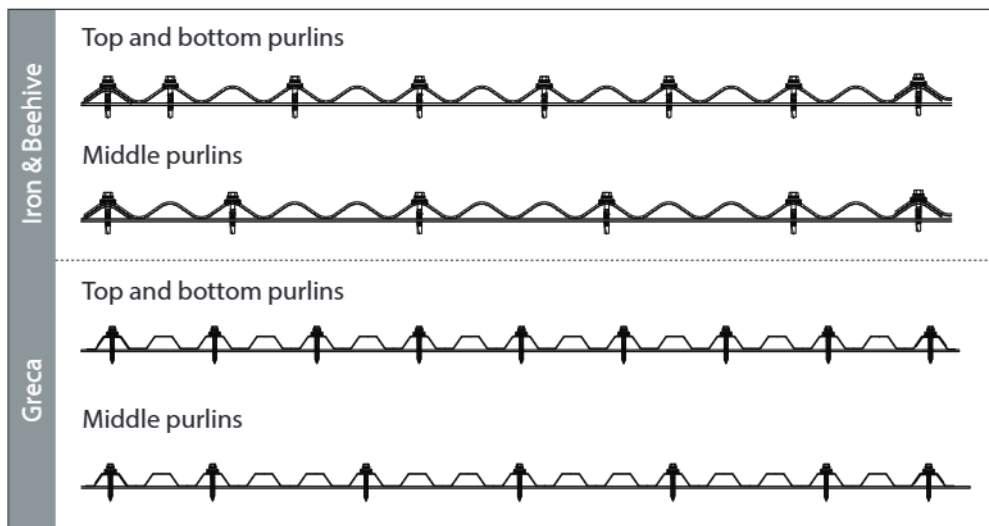


1 Foam tape application

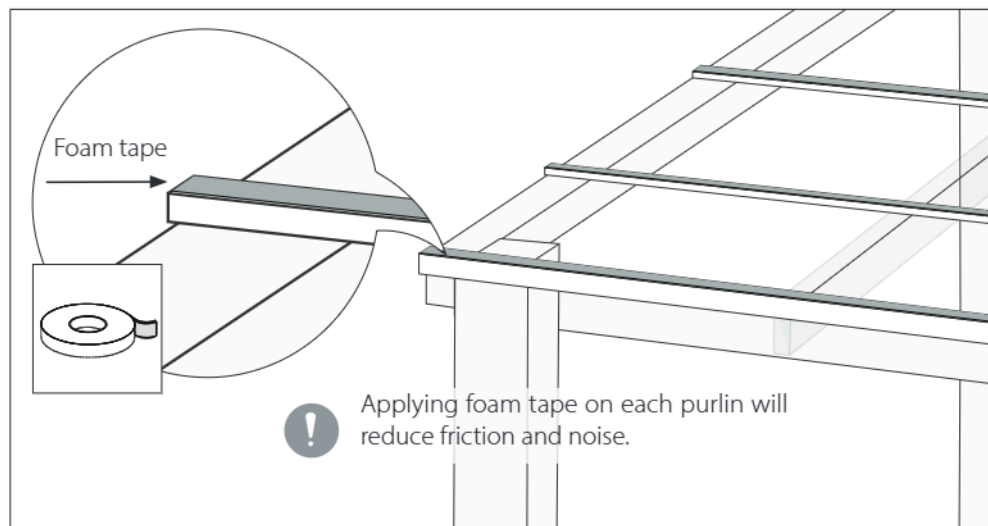


! Overlap

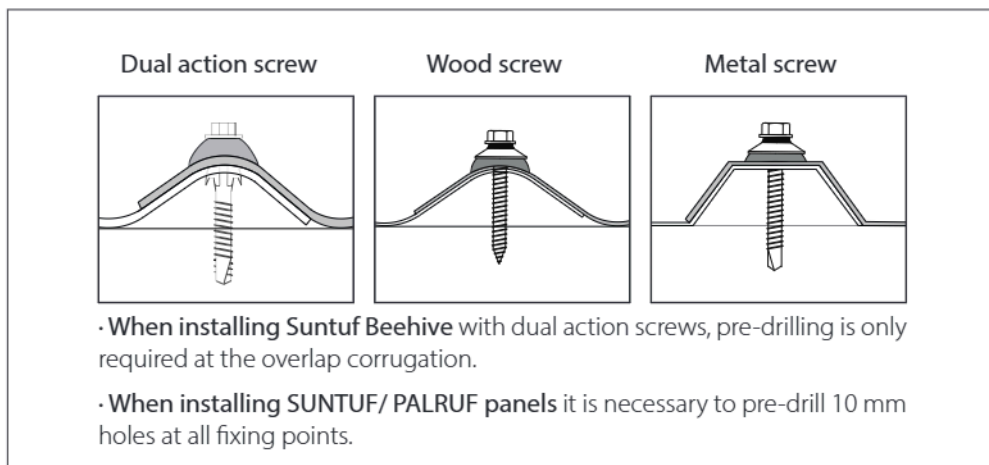


2 Measuring and cutting

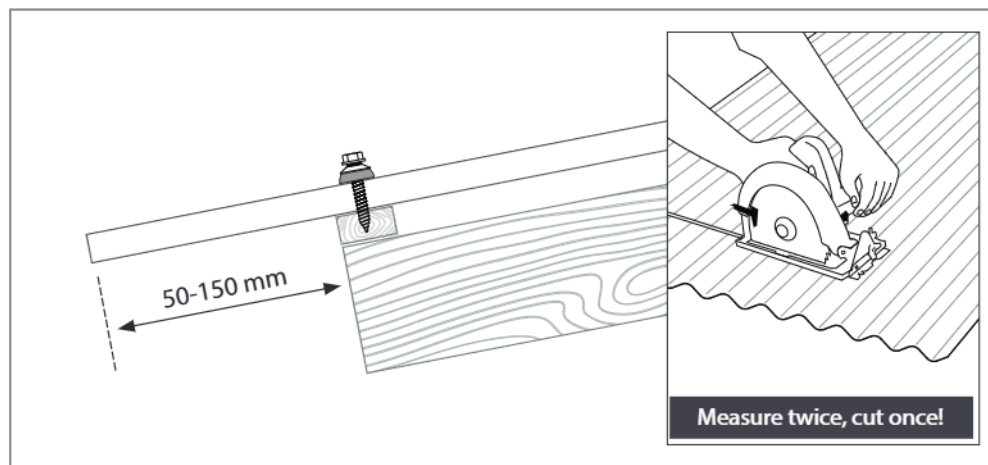


3 Setting the first sheet

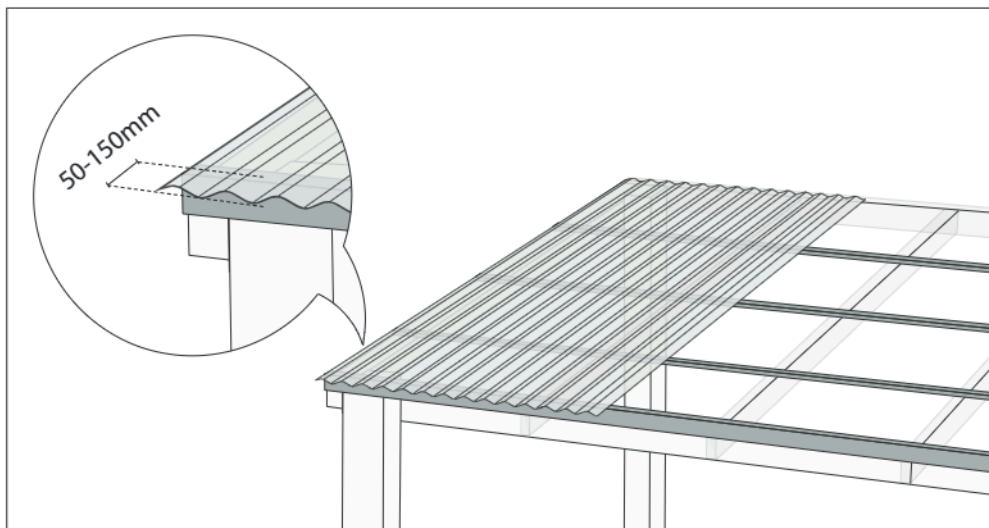


4 Drilling the first sheet

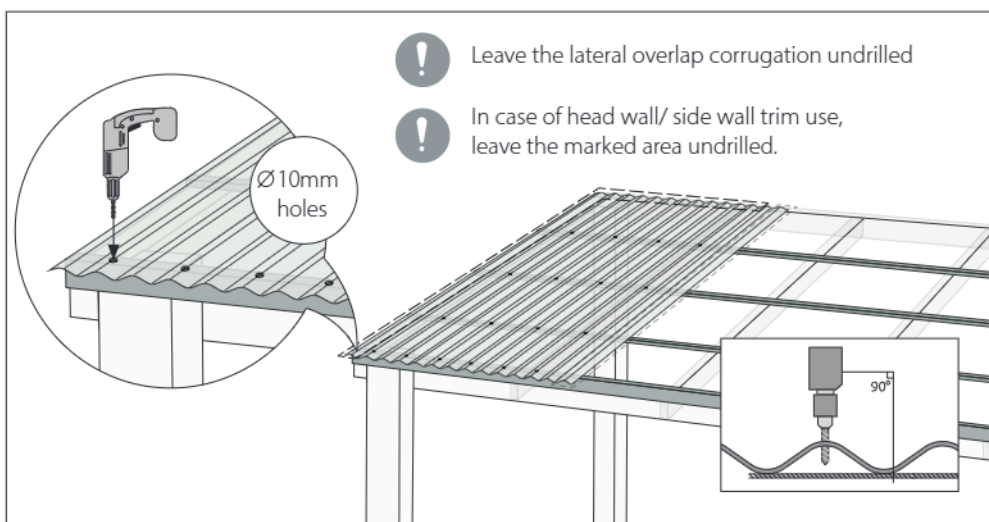


5 Fixing the first sheet

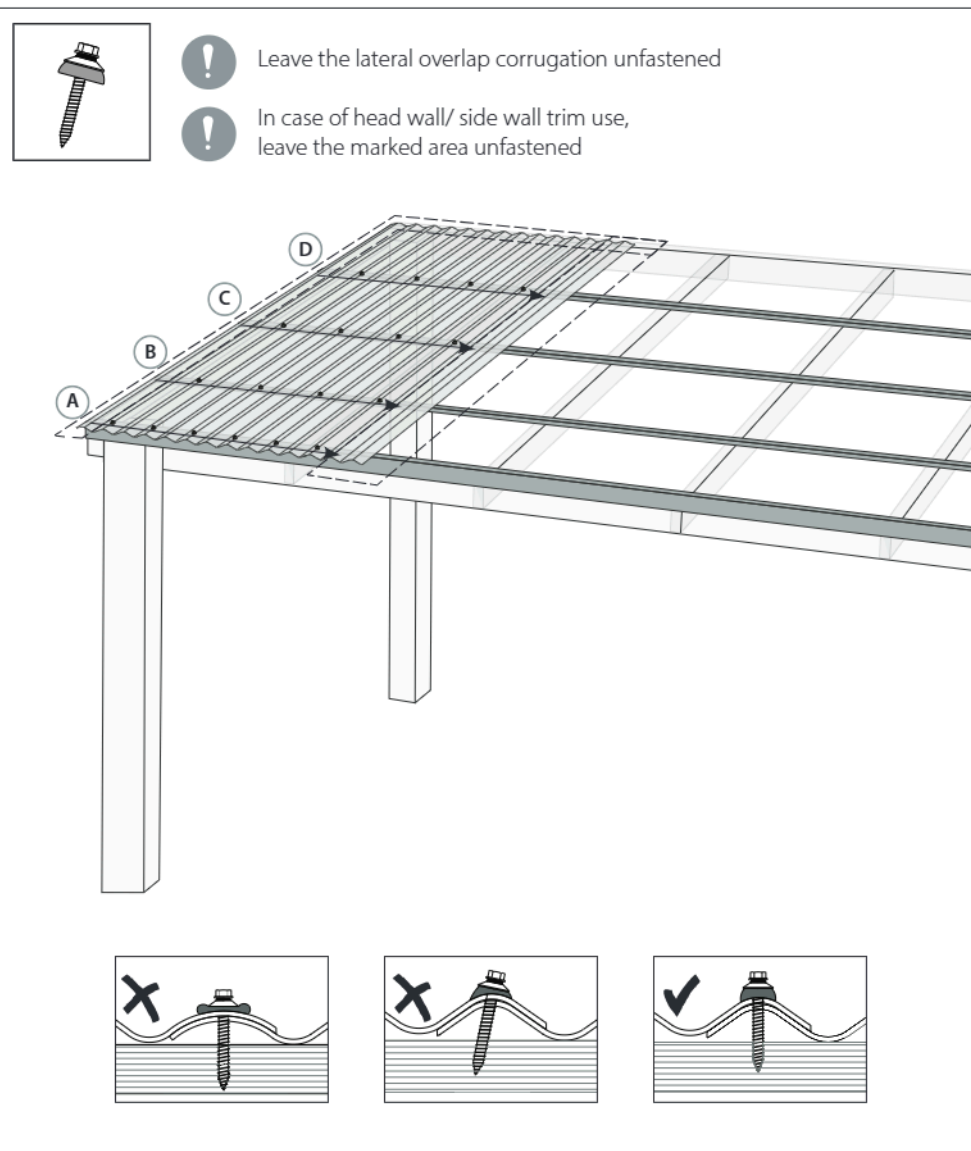


6 Setting & drilling the second sheet

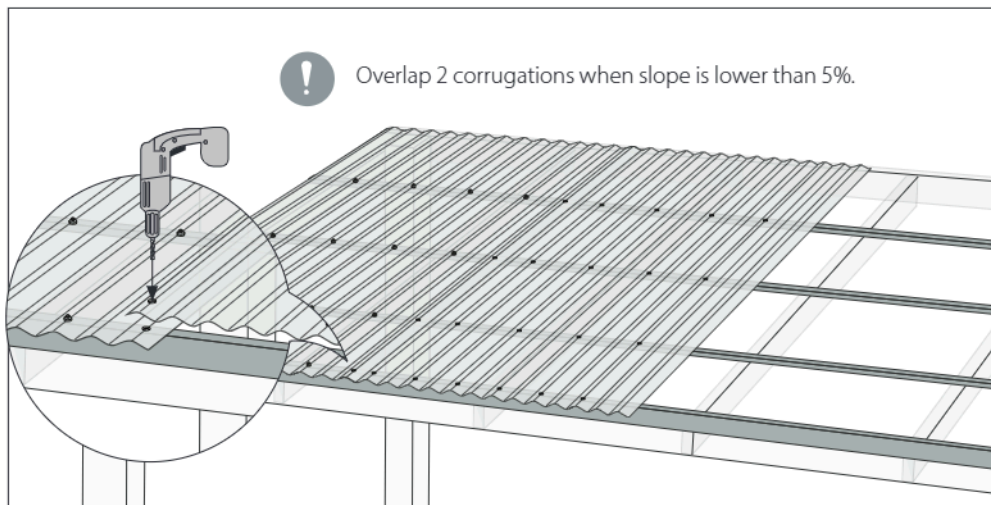


8 Repeat stages 6-7 until the pergola is fully covered

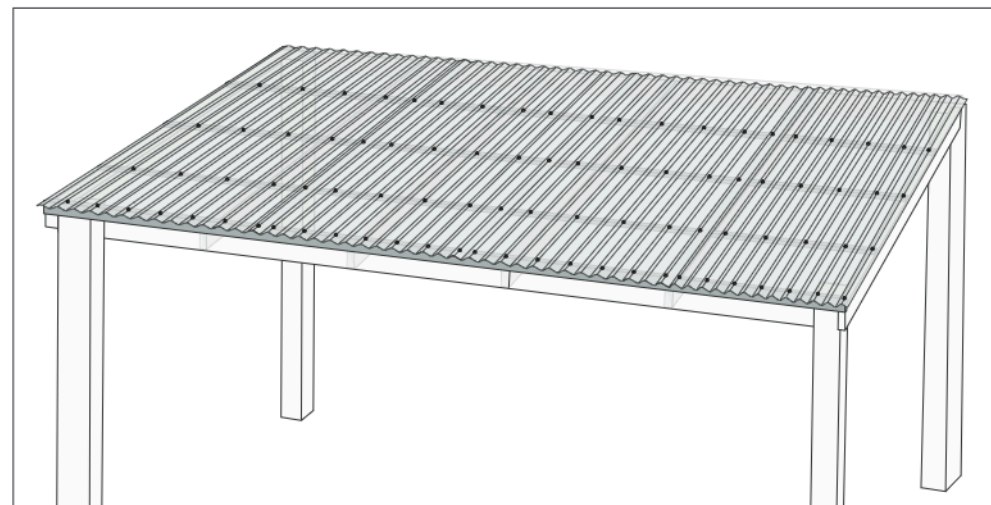


7 Fixing the second sheet

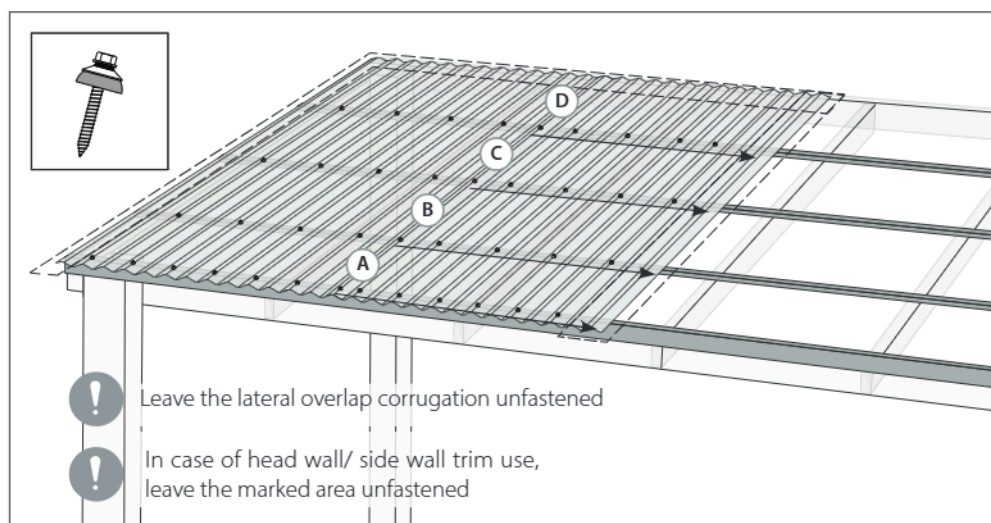


! Use a butyl sealing tape between the sheet and the wall trim/ ridge cap accessory.

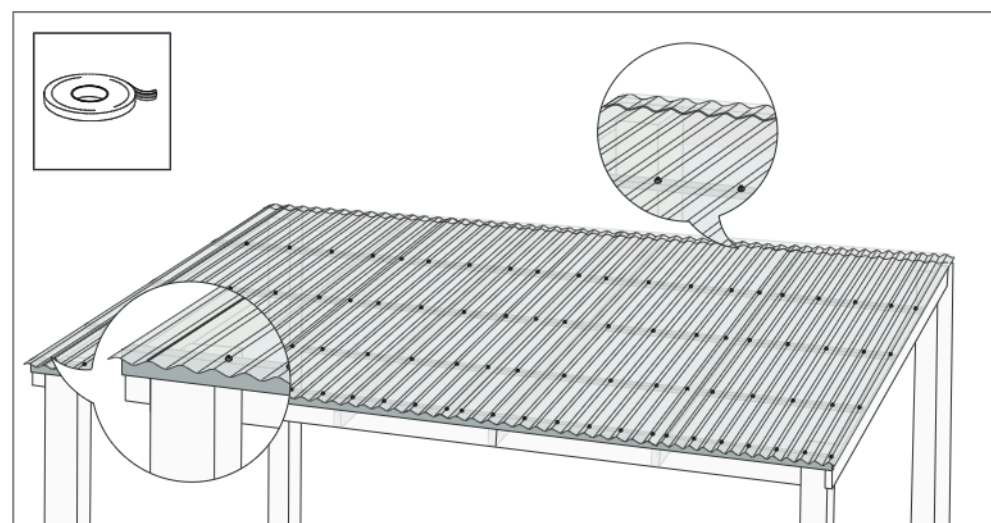


9 Head wall trim

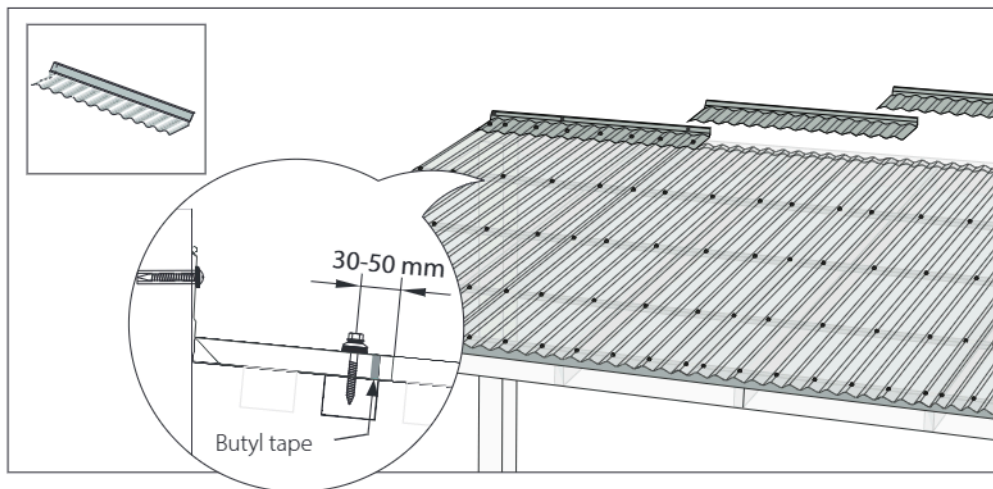

10 Side wall trim

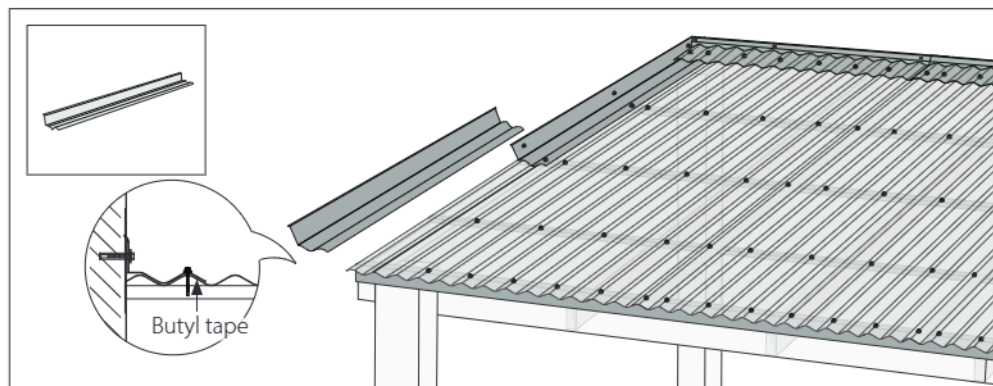

11 Silicone

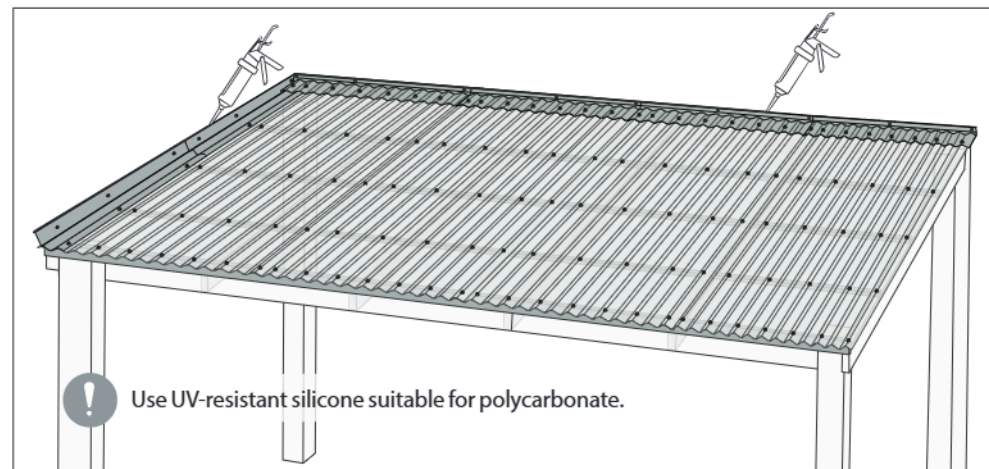

12 Universal ridge cap

